

# PK material loading table problem


## Fault description:

1. When the gantry pick up a sheet from the loading table, **the loading table can not reset** to adjust the height of itself.
2. When the loading table reset, it can not stay at a suitable position.
3. Can not detect the material

**The loading table can not reset:**

**1. Check the sensors on the both side of the table. This sensor is used for detecting the height of material which can make the table move a suitable position. Please be sure that two sensors are aligned.**

**2. Need to adjust the luminous flux of the sensor.(**Check the video in the following page**) This device is under the loading table.**

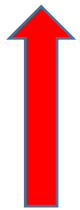

Check the video here of how to adjust the luminous flux of the sensor

**The loading table can not stay at a suitable position after the table has reset.**


- 1. Need to adjust the sensors' position on both side of the table.**
- 2. Use the up & down button to adjust the height of table reset position.**



**Sensor on the right side**



**Sensor on the left side**

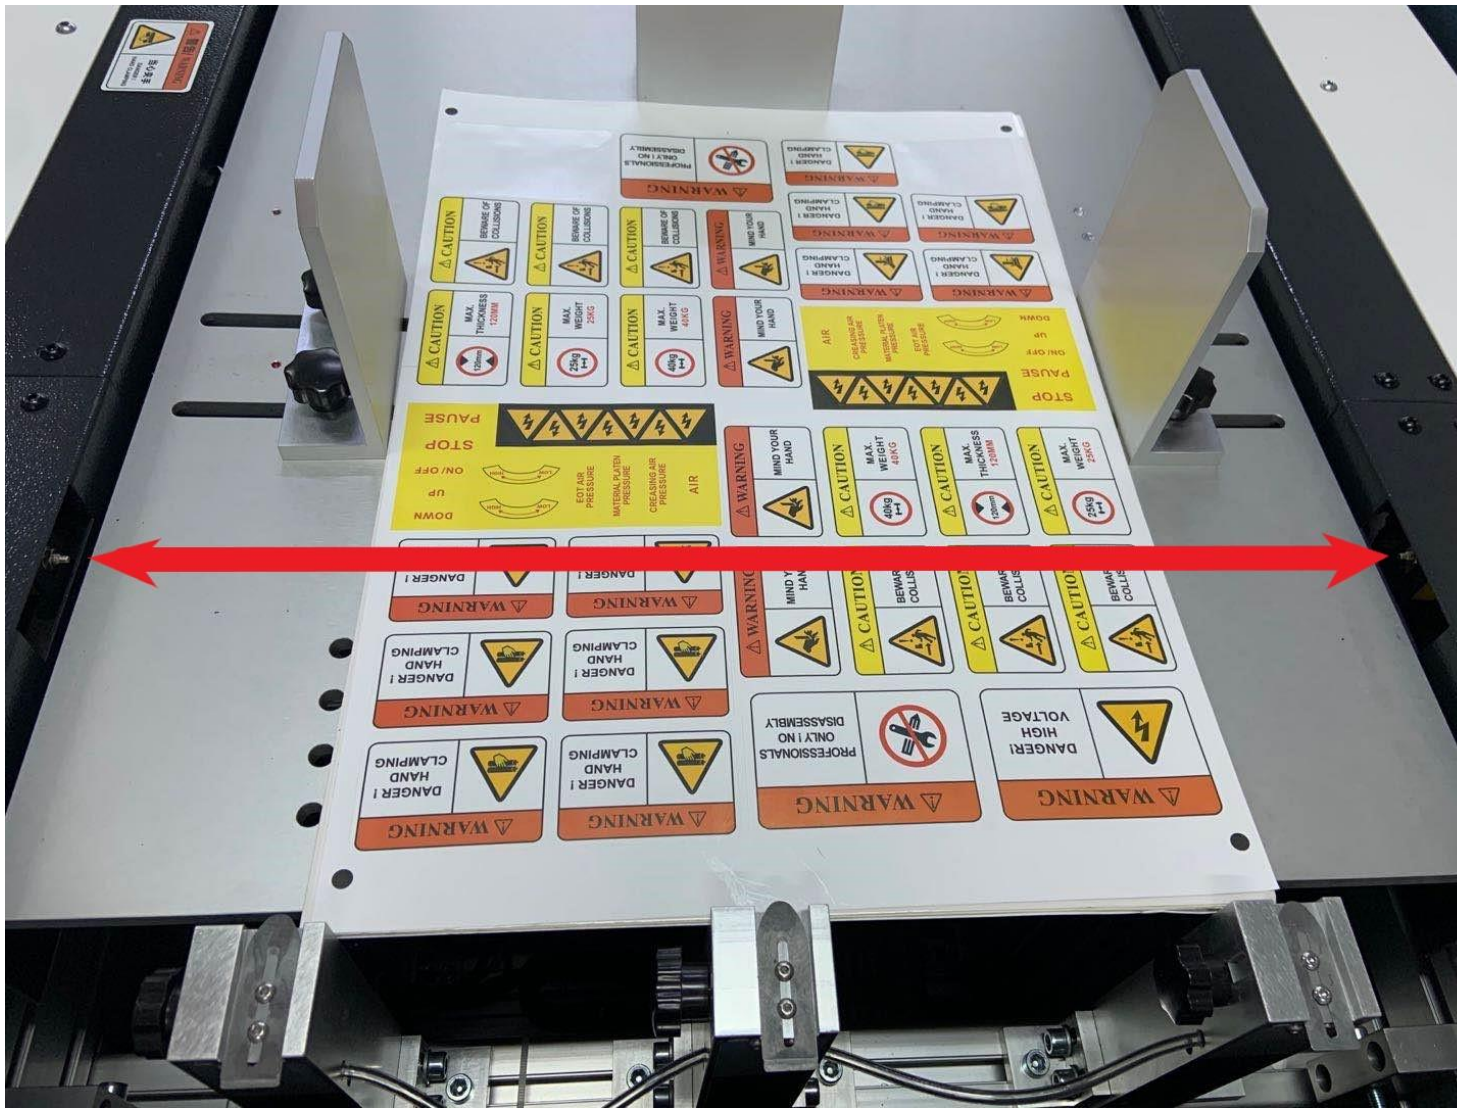

**Two sensors should be at aligned**

**Need to adjust the sensor under the table when it can not detect the material.**

**Adjust the knob of the sensor. When there is no material on the table, the light of the sensor should be green. Otherwise the light should be red.**

**Check the video in the following page.**



[Check the video here.](#)