



PK right angle adjustment

Fault description:

For example when cut a square, the right angle is not good.

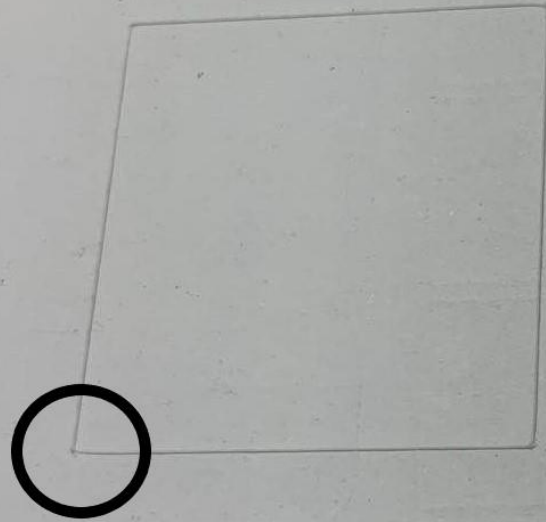


bad one

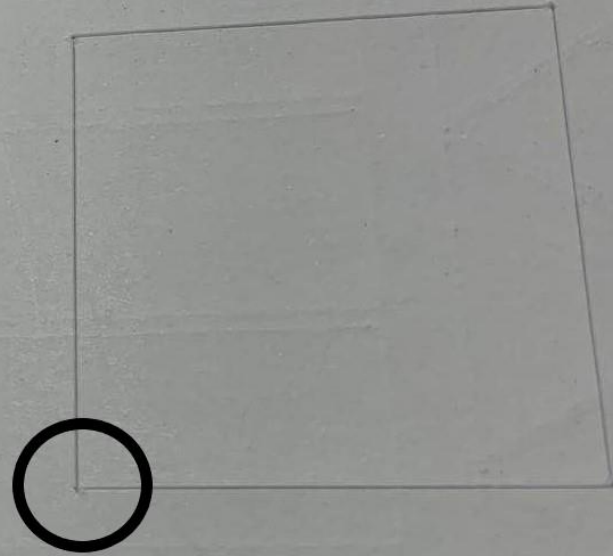

good one

Adjust the X eccentric distance of the tool in order to adjust the right angle.

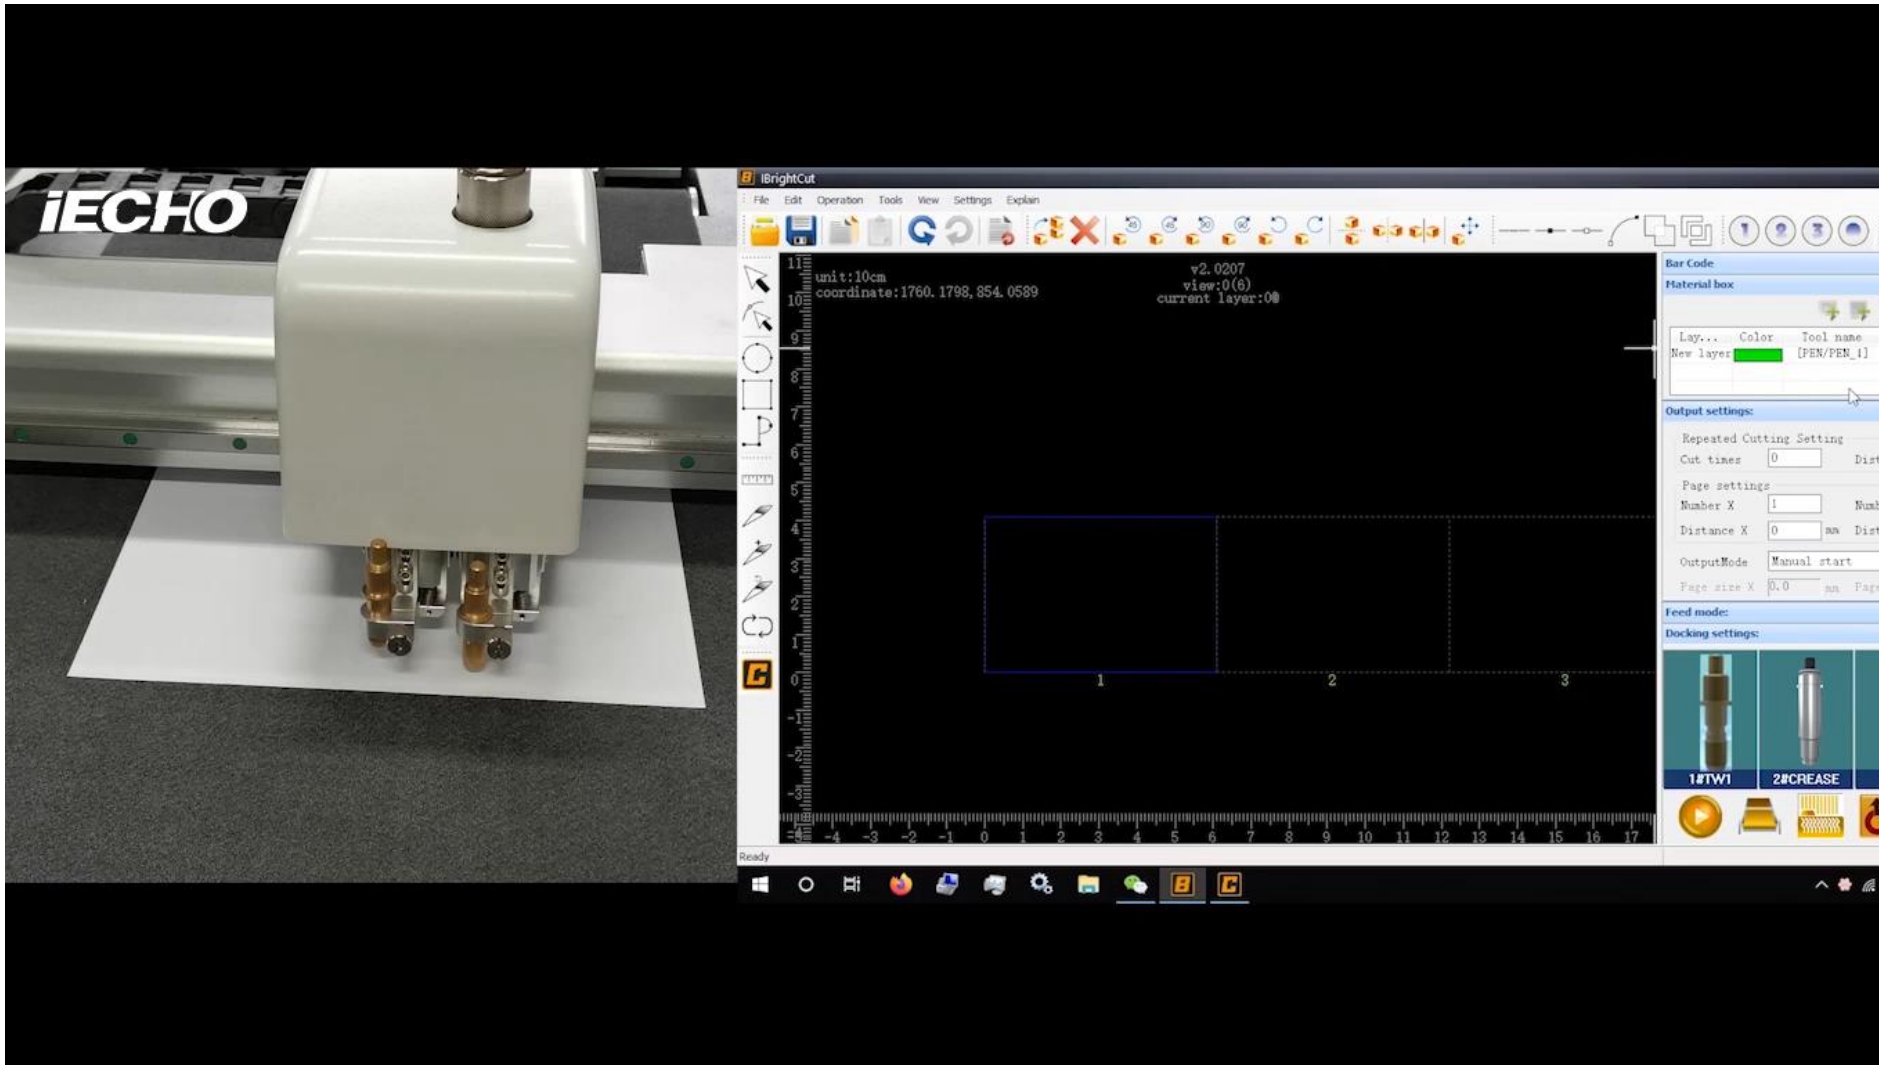

Check the video here of how to adjust the X eccentric distance.